MC-MP SPA PACK

• Gecko Alliance •



The Ouick Reference Card provides a quick overview of your spa's main functions and the operations accessible with your digital control pad.

Starting Pump I:



Press Pump I to turn Pump I on at low speed (for dual-speed pump). Press a second time to tum Pump I to high speed. A third time tums Pump I off. A built-in timer automatically turns Pump I off after a predetermined period of time, unless it has been manually deactivated.



The "Pump I" indicator lights up when Pump I is on at high speed. It flashes when Pump I is on at low speed.

Starting Pump 2:



Press **Pump 2** to turn Pump 2 on at low speed (for dual-speed pump). Press a second time to turn Pump 2 to high speed. A third time turns Pump 2 off. A built-in timer automatically turns Pump 2 of after a predetermined period of time, unless it has been manually deactivated.

 


The "Pump 2" indicator lights up when Pump 2 is on at high speed. It flashes when Pump 2 is on at low speed.

Starting Pump 3:



Press Pump 3 to turn Pump 3 on. Pressing a second time turns Pump 3 off. A built-in timer automatically turns Pump 3 off after a predetermined period of time, unless it has been manually deactivated.



Standby mode:



Press **On/Off** to turn the system down (i.e. to set it to Standby mode) for 30 minutes. The "OFF" message is displayed. All keys are then disabled, unless you press **On/Off** to reactivate the system before the expiration of the 30-minute delay.

N.B.: If the system is turned down using On/Off key while the heater is on, Pump I (or circulation pump) will run for an additional 30 seconds.

Economy mode:



Press **Econo** key to switch from Normal mode to Economy mode. To save energy, the Economy mode Set Point is 20°F (11°C) below the Normal mode Set Point. The display toggles between the "Econ" message and the current temperature.

Temperature unit:

Press and hold **Light** key for 5 seconds to toggle

Starting the blower:



Press Blower to turn blower on at high speed. Press a second time to turn blower to low speed. A third time turns blower off. A built-in timer automatically turns blower off after a predetermined period of time, unless it has been manually deactivated.



The "Blower" indicator lights up when blower is on at high speed. It flashes when blower is on at low speed.

Setting water temperature:



Use **Up** or **Down** arrow key to regulate water temperature. The temperature setting will be displayed for 5 seconds to confirm your new selection.



The "Set Point" symbol indicates the desired temperature, NOT the current water temperature!

Water temperature can be adjusted by 1 $^{\circ}$ increments from 59 to 104 $^{\circ}$ F (15 to 40 $^{\circ}$ C).

Turning the light on:



Press **Light** to turn light on at high intensity. Pressing a second and third time changes its intensity. A fourth time turns light off. A built-in timer automatically turns light off after 2 hours, unless manually deactivated first.



The "Light" indicator is displayed when light is on at high intensity. It flashes when light is on at medium or low intensity.

If your spa has an optional fiber box, press **Light** key to turn fiber box (motor & light) on. Press a second time to turn fiber box motor off and leave light on. A third time turns both motor and light off. The "Light" indicator lights up when fiber box light is on. It flashes when motor and light are on. A built-in timer turns fiber box off after 2 hours, unless it has been manually deachiasted.

Automatic water heater start:

When water temperature is 1°F (0.5°C) lower than the Set Point, the heater will automatically turn on until water temperature reaches Set Point plus 1°F (0.5°C).



The "Heater" indicator lights up when the heater is on.

Inverted display:

Press and hold **Filter** key for 5 seconds to invert the display. If a power-up occurs, the display always returns to default mode.

PAD LOCKOUT

This function allows you to prevent unauthorized parameter setting of the unit. This feature is especially helpful when young children have access to the keypad.

There are two modes you can choose from: Full lock or Partial lock. Full lock means that all keypad functions are locked. Partial lock means that the basic functions of the spa will remain accessible (pumps, blower and light)

Locking your digital control pad: Press and hold Pump I key for 5 sec. The display will show LocP, with "P" representing Partial lock. Release key and keypad will be in Partial lock mode. Keep key pressed down for 5 more seconds if you want to be in Full lock mode. The "Locf" message will then be displayed.

When control pad is locked, all automatic functions of the system run as usual. If a key is pressed down, a "LocP" or "LocP" message will be displayed for 1 sec. To unlock keypad, simply press and hold Pump I key again for 5 sec.

PROGRAMMING FILTER CYCLES

The system automatically performs two filter cycles per day, at 12-hour intervals. During a filter cycle, Pumps 2 & 3 and blower run at high speed for one minute then Pump I runs at low speed for a programmed number of hours and ozonator is activated.

To set filter cycle duration and frequency











Press **Filter** key. The display will show **Fdxx**, with "xx" representing the currently set filter cycle duration in hours.

Use **Up** or **Down** arrow key to change setting. 0 = no filtration12 = continuous filtration

When the desired setting is displayed, press **Filter** again. The display will show **FFxx**, with "xx" representing the filter cycle frequency per day.

Use **Up** or **Down** arrow key to change setting (from 1 to 4. depending on selected duration). When the desired setting is displayed, press **Filter** to confirm.



An irregularly flashing "Filter Cycle" indicator means that the system has stopped filtering after 3 hours because water temperature exceeds Set Point by more than 2°F (1°C). If temperature cools down before the scheduled end of the cycle, filtering will resume for the remainder of the programmed cycle duration.

The "Filter Cycle" indicator lights up when a filter cycle is on.

40-minute filter cycle time-out: If you turn a pump, blower or light on during a filter cycle, the cycle will be interrupted and will only resume 40 minutes after you (or the system) have turned the last active output off.

Purge cycles: During a purge cycle, pumps and blower run for two minutes and "Filter Cycle" indicator lights up. To set a purge cycle, press **Filter** key. The display will show **P xx**, with "xx" representing the currently set number of daily purge cycles. Use **Up** or **Down** arrow key to change setting. Press **Filter** key again to store settings.

After a power failure, the first filter cycle will start 12 hours after power has been restored.

TROUBLESHOOTING

